

Once upon a time,

there was no choice. If you wanted to create a wall of sound, you HAD to use a string machine. This was long before „real“ polyphonic synthesizers were born, long before composing was an occupation like doing your taxes while sitting in front of a big screen TV. These were the golden years of electronic music! A time when keyboard players simply plugged in and played instead of endlessly browsing sounds and loops from vast hard drive collections.

Now that you own Streichfett, the good old days are here again right on your desktop. Side-by-side with today's technology,

hand-in-hand inside your own personal space, this tiny black box will let you truly know what it means to pilot a REAL electronic instrument. It sounds raw, it sounds deep, it sounds wild and wide. And this magical experience will unfold in front of you with just a few knobs and switches.

If you own a vintage string machine, we invite you to do a little comparison. You'll be truly blown away by how WELL Streichfett creates the sound of those much-acclaimed vintage string machines that were behind so many massive hit records.



waldorf



streichfett
VERORDNUNG



waldorf
From Germany with Love

designbox

Basic factory picture © jamesharrison75 – Fotolia.com

All product and company names are ™ or ® trademarks of their respective holders.

Technical specifications and designs are subject to change without notice. All rights reserved.

© Waldorf Music GmbH | Lilienthalstr. 7 | 53424 Remagen | Germany

Strings Section

The three modes of the **Ensemble** effect
String: the classic string ensemble effect
String + Chorus (middle): Combination of Strings and Chorus for maximum diffusion
Chorus: The classic chorus effect

Ensemble
 Switches the **Ensemble** effect for Strings on/off. Note that the Strings may sound quite unimpressive and dull without this effect, just as they did on the original instruments. So we recommend to always keep this button lit.

Registration:
 By moving this knob, the sound morphs smoothly through Violin, Viola, Cello, Brass, Organ, Choir and more. This knob also controls the oscillator and equalizer settings of the Strings section.

Octaves
 This is the octave setting for the Strings. Three positions are available:
8va: One octave higher than the **Base** octave
Both: **Base** octave mixed with an octave higher
Base: The normal octave setting

Crescendo
 This is the attack rate for the Strings' envelope.

Release
 The **Release** rate for the Strings' envelope. Sustain is always at 100%, so there is no need for a decay setting.

Effects

The three effects
Animate: A Low Frequency Oscillator, aka LFO, modulates the Strings sound. Both depth and rate change as you turn the knob.
Phaser: Classic phase shifter effect. Feedback, depth and rate are adjusted with the single knob using the most pleasing settings we could find.
Reverb: Change both the size and volume of the ambient room effect by scrolling through the most useful settings.

This switch controls which effect is adjusted by the Depth knob. Note that all three effects can be combined simultaneously.

MIDI channel setting:

Press and hold all 4 buttons, then play one note using MIDI or USB. Streichfett sets the MIDI channel for both MIDI In and MIDI Out based on the channel of the incoming Note On message. For Omni mode, hold down all 4 buttons when powering on Streichfett. When a channel from 1 to 14 is selected, the Solo section can be triggered independently of the Strings section on the next

higher channel, ignoring the split settings. So for example, in order to play Strings on Channel 1 and Solo on Channel 2, do this:

- > Press and hold all 4 buttons (1-4), then play a note on MIDI Channel 1 to set the MIDI channel.
- > Set the **Balance** knob to the middle position so you can hear both Strings and Solo.

> Press and hold the lowest note available and set the **Split** switch to „Low.“ This sets the split key very low and prevents Solo from being mixed in if you play Strings on Channel 1.

Now you can play Strings on Channel 1 and Solo on Channel 2.

Solo Section

Balance
 The mix of Strings and Solo. The left position selects Strings only. The right position selects only the Solo section. In the middle position, both Strings and Solo are mixed at full volume.

Tone
 This selects the sound of the Solo section. Moving this knob morphs smoothly through Bass, E-Piano, Clavi, Synth and Pluto. Note that sounds only have a vague resemblance to their names ... this of course in keeping with the style of string machines.


Tremolo
 This adjusts both the rate and depth of the stereo tremolo effect.

Split
 This 3-position switch lets you set key splits for the Solo section.
Low: Only the notes lower than the split key will sound. Holding down one key of your keyboard when selecting „Low“, sets the split key to the current note being held.
Layer: Solo plays on all keys.
High: Only the notes from split key and above will sound. Set the split key by holding down the desired key while setting the switch to „High.“

Envelope
 This switch controls the envelope operation for the Solo section: in the left position, the envelope has no sustain and decays immediately after the initial attack. In the right position, notes are held at full sustain level until the key is released.

Attack
 In addition to setting the **Attack** rate of the envelope, the first third controls how much of a percussive click sound is added each time a key is pressed.

Decay / Release
Decay or **Release** rate for the envelope.

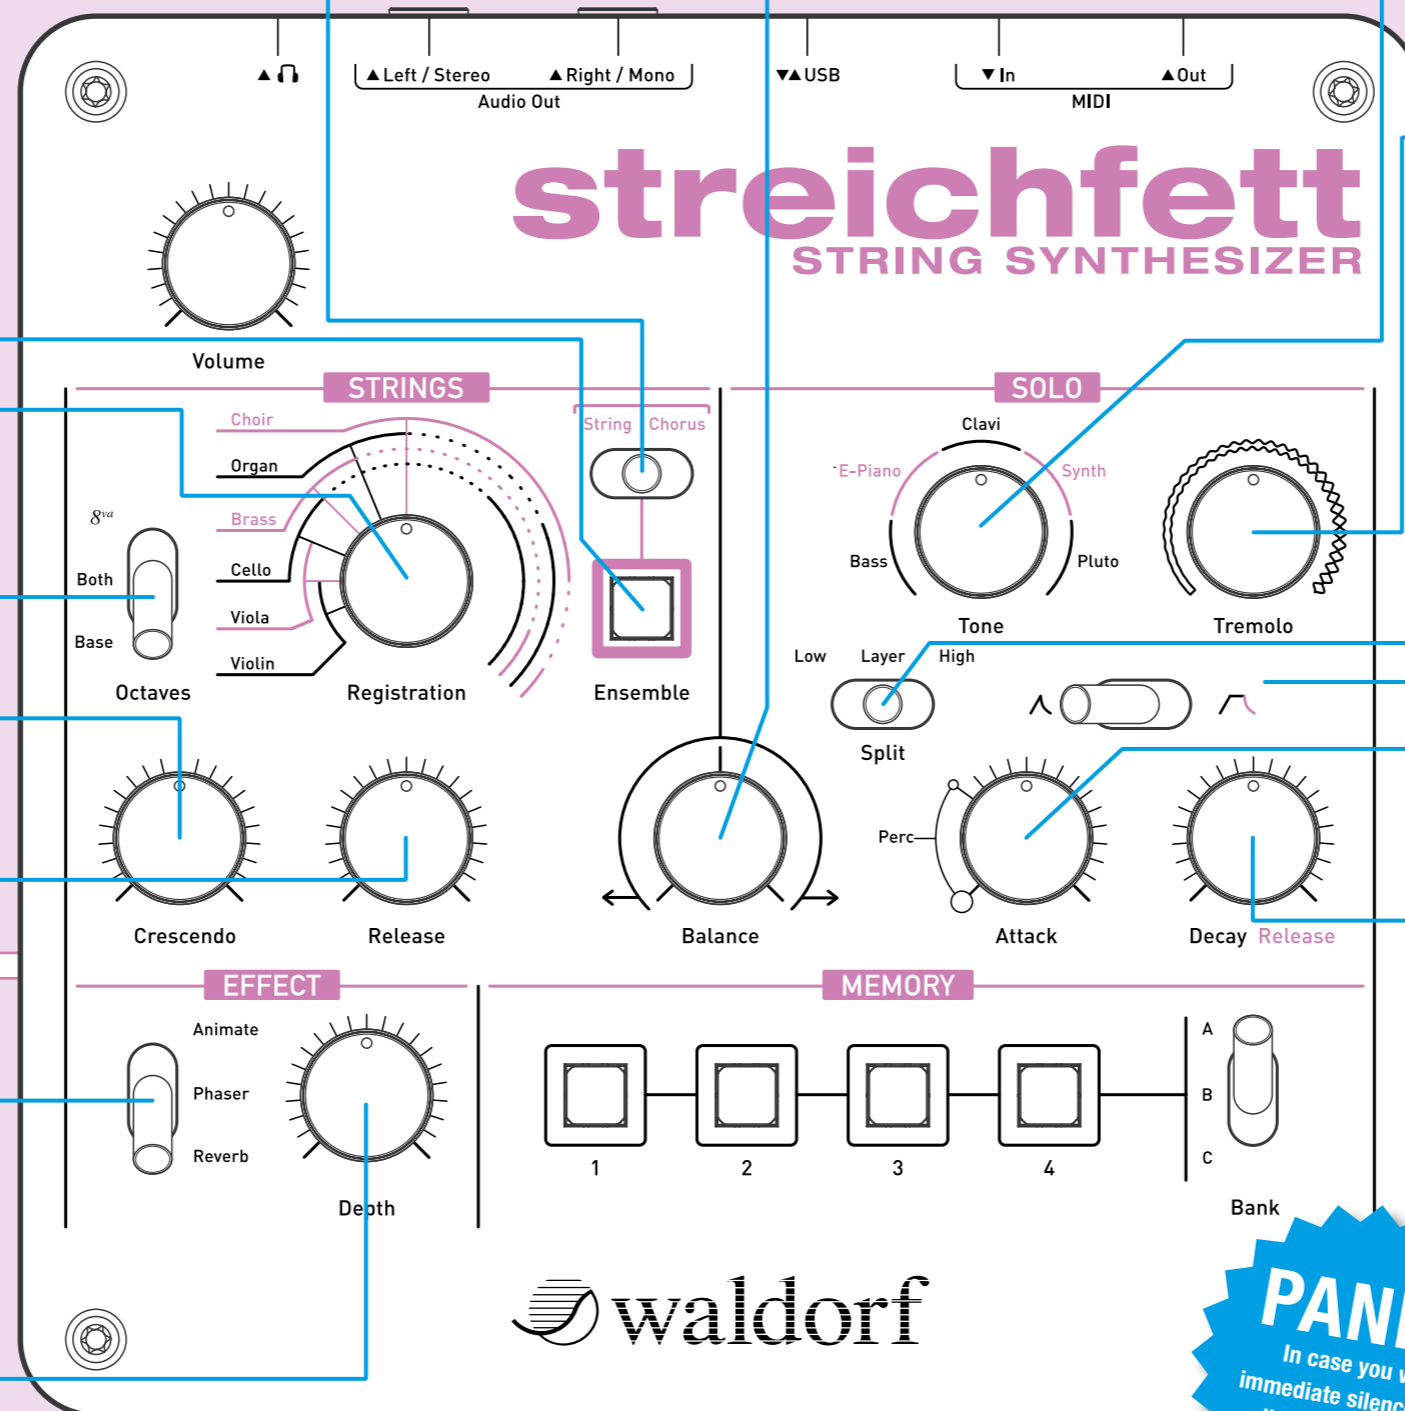

PANIC!
 In case you want immediate silence, press all four buttons 1...4 simultaneously.

Pitch Bend Range:

Press and hold buttons 1-4, then move the Effect select switch to the desired position:

- Animate:** 2 semitones (default)
- Phaser:** 7 semitones
- Reverb:** 12 semitones (one octave)

To consult the full manual, please visit the download section of our website at www.waldorfmusic.de.

For Your complimentary Waldorf Edition LE, enter your credentials and this coupon on le.waldorfmusic.de
LESTF-PU6L-8ERJ-XQEB-CL3F

